

1 x 6 x 72"

(Qty 1)



1 x 6 x 96"

(Qty 3)



2 x 4 x 96"


(Qty 3)



Step 1: Assemble Base


Drill **pocket holes** for **1-1/2"** material and **pocket holes** for **3/4"** material, as shown.

Assemble base using **2-1/2"** pocket hole screws.

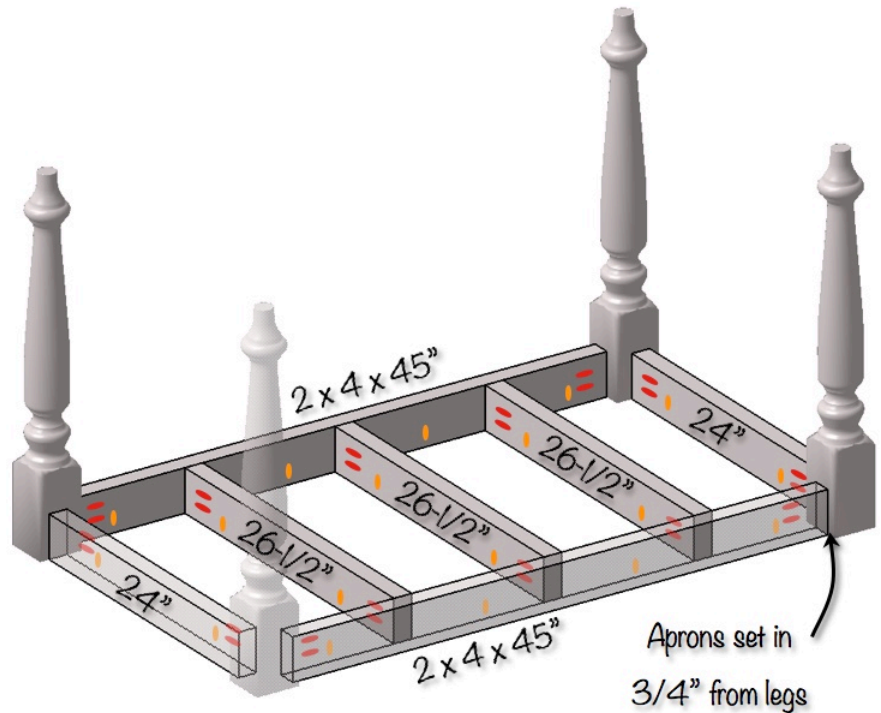

ROGUEENGINEER.com


Step 2: Assemble Top

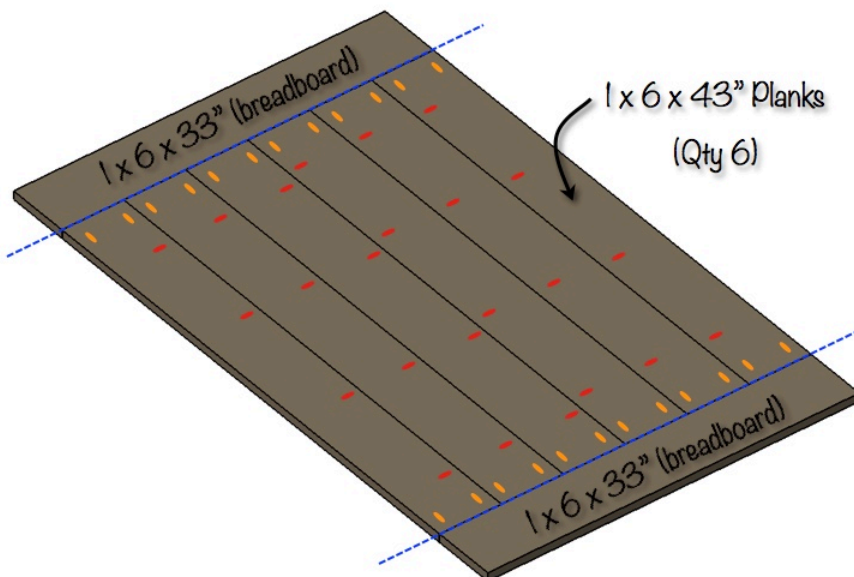

Lay out boards as shown.
Mark and **drill pocket holes**.
Clamp and assemble 43" planks using **1-1/4"** pocket hole screws.
Cut straight edges to assure flush breadboard fit.
Drill pocket holes and attach breadboards using **1-1/4"** pocket hole screws.

Step 3: Final Assembly

Utilize the **existing pocket holes** from step 1 and attach the base to the top using **1-1/4" pocket hole screws**.

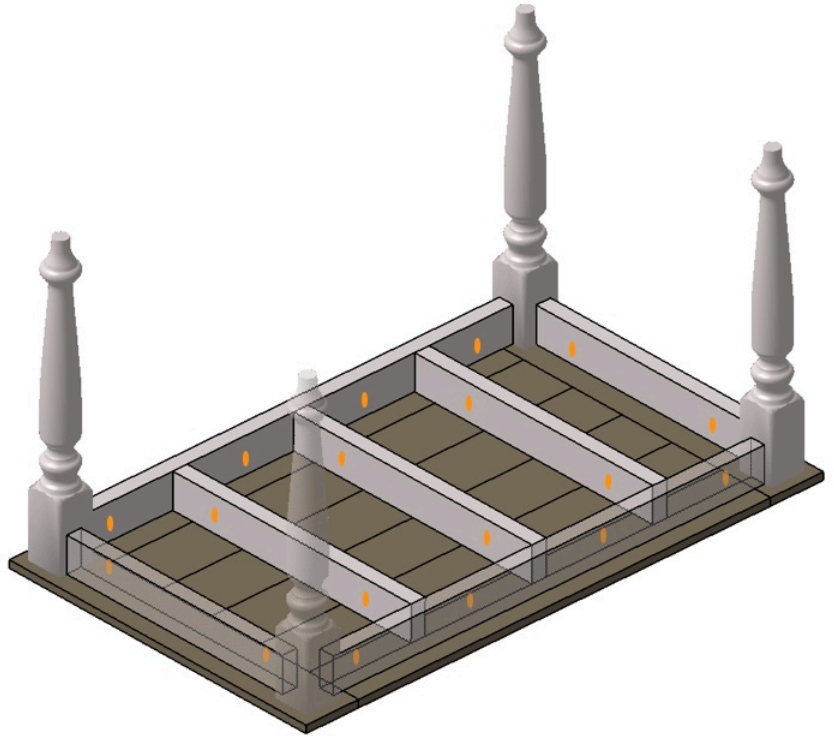

ROGUEENGINEER.com