



# PARQUET COFFEE TABLE DIY PLANS

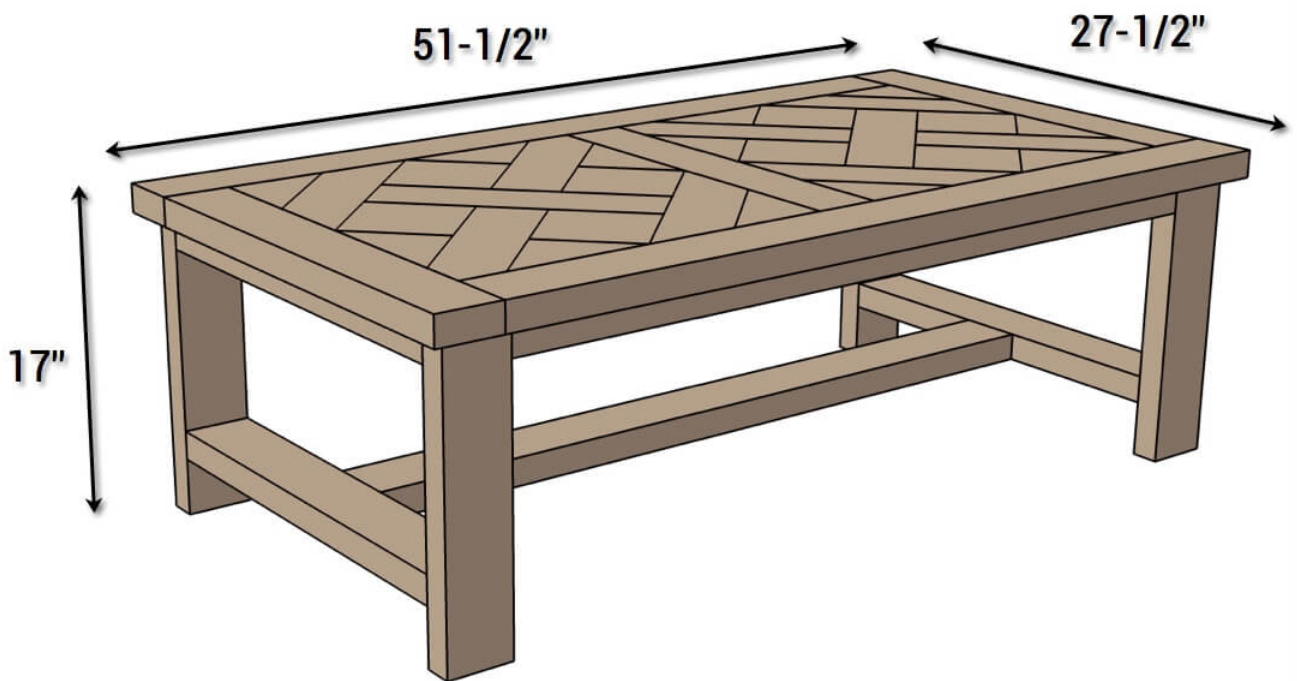


**ROGUE**  
**ENGINEER**.com


Qty 5 2 x 4 x 96" (Premium Studs; SPF)

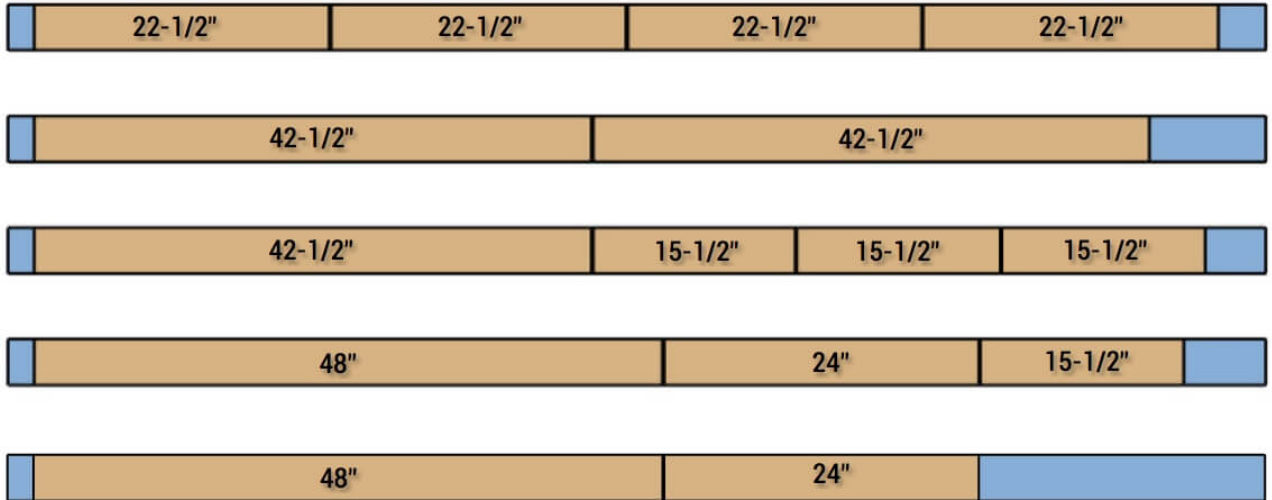



**Qty 2 1 x 4 x 8' (Common Boards; Pine)**

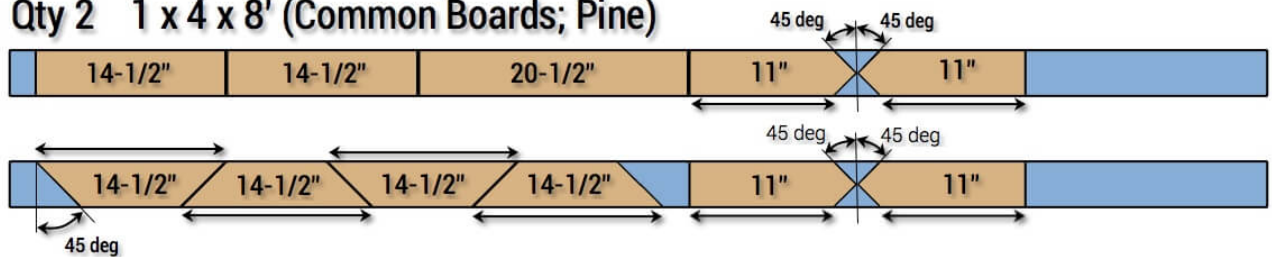


**1 x 6 x 8' (Common Board; Pine)**

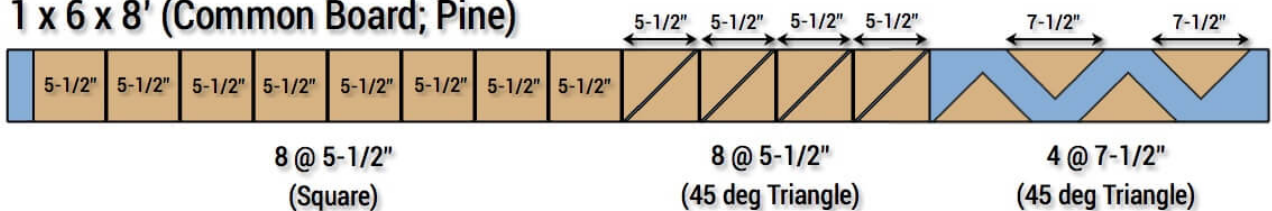

**3/4" x 24" x 48" (Plywood; Project Panel)**

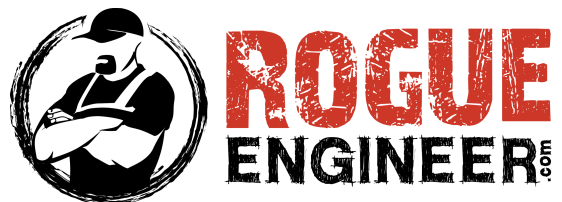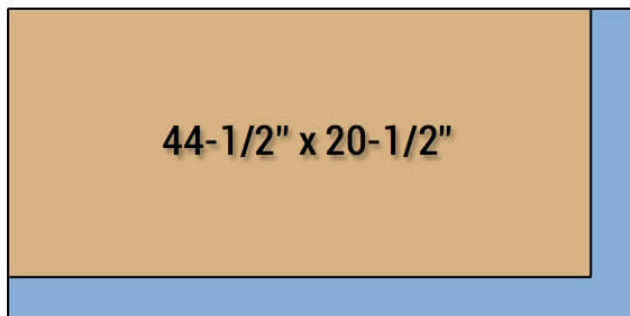


# Step 1: Assemble Pattern

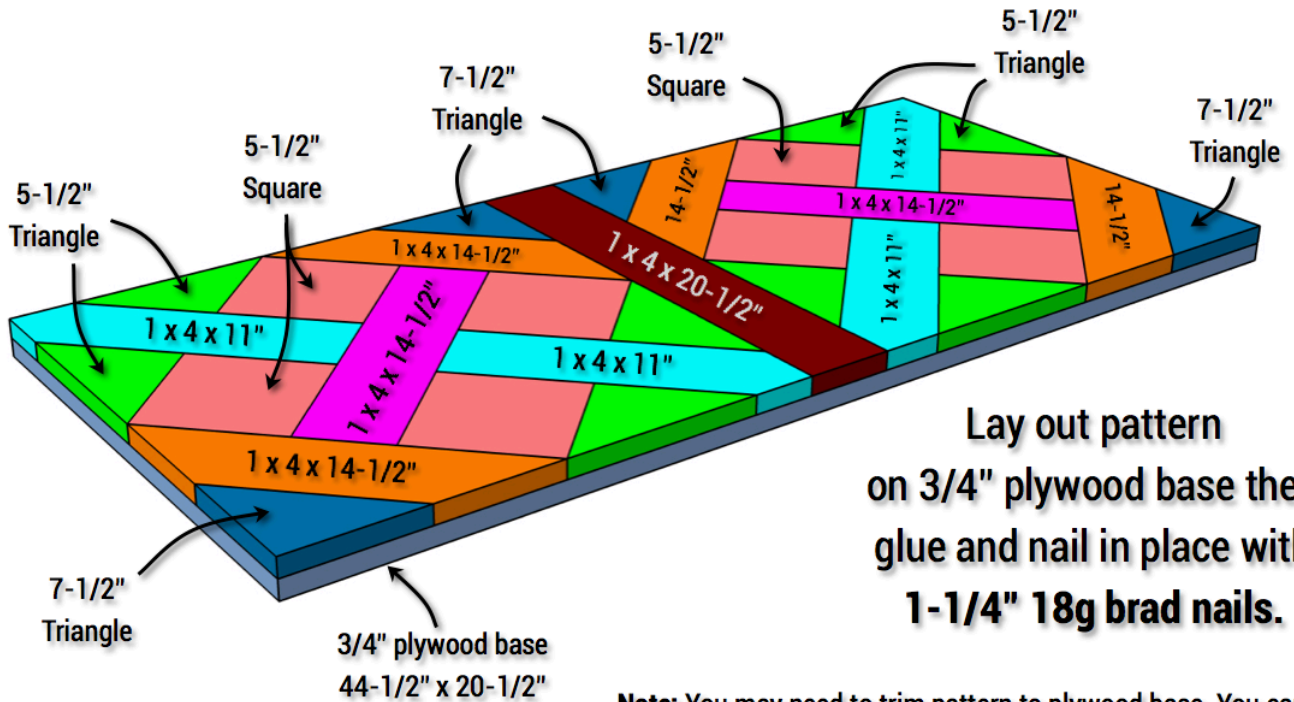

Lay out pattern  
on 3/4" plywood base then  
glue and nail in place with  
**1-1/4" 18g brad nails.**


**Note:** You may need to trim pattern to plywood base. You can do so with a router and flush trim bit, sander and/or circular saw.

# Step 2: Assemble Top

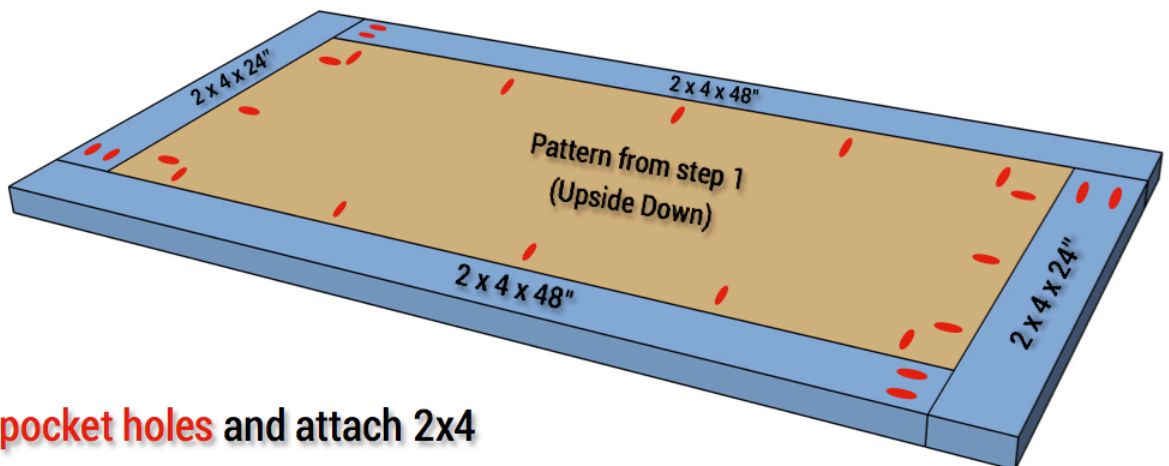


**Drill pocket holes** and attach 2x4  
trim as shown using  
**2-1/2" pocket hole screws.**

## Step 3: Assemble Base

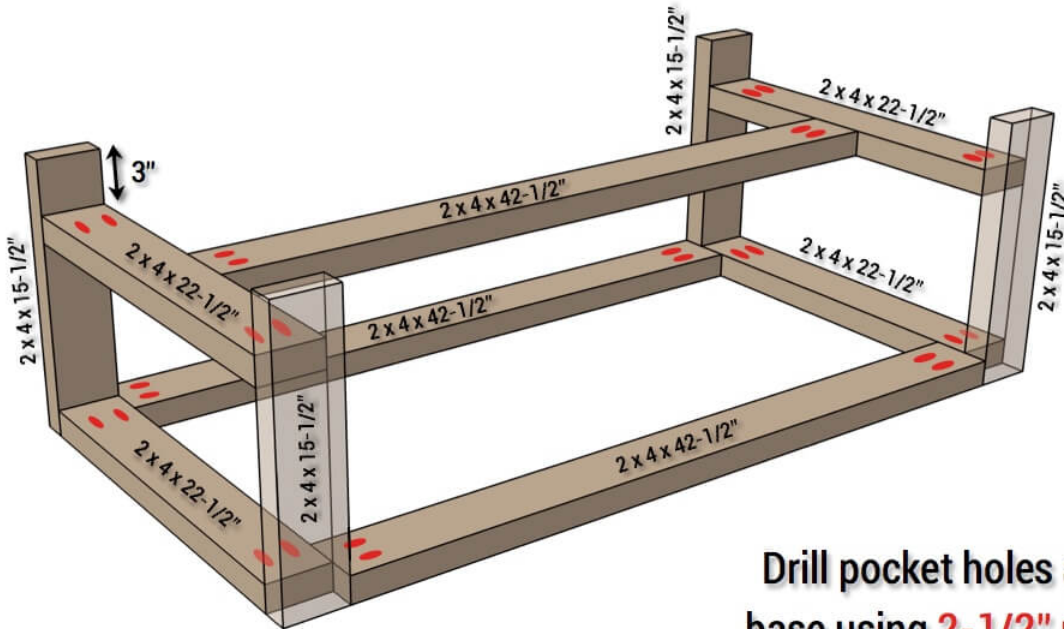

Drill pocket holes and assemble base using **2-1/2" pocket screws**.

## Step 4: Final Assembly

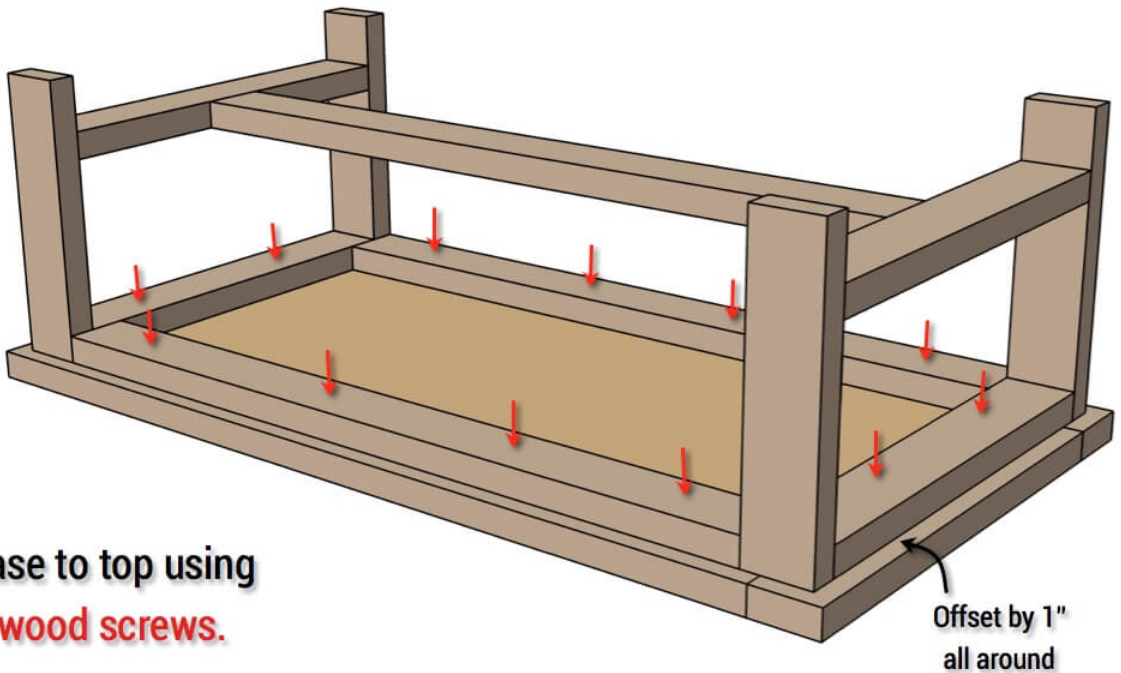

Attach base to top using  
**2-1/2" wood screws**.